
## INSTALLING MOTOR VALVE WITH V7 & V10 12 PIN PLUG

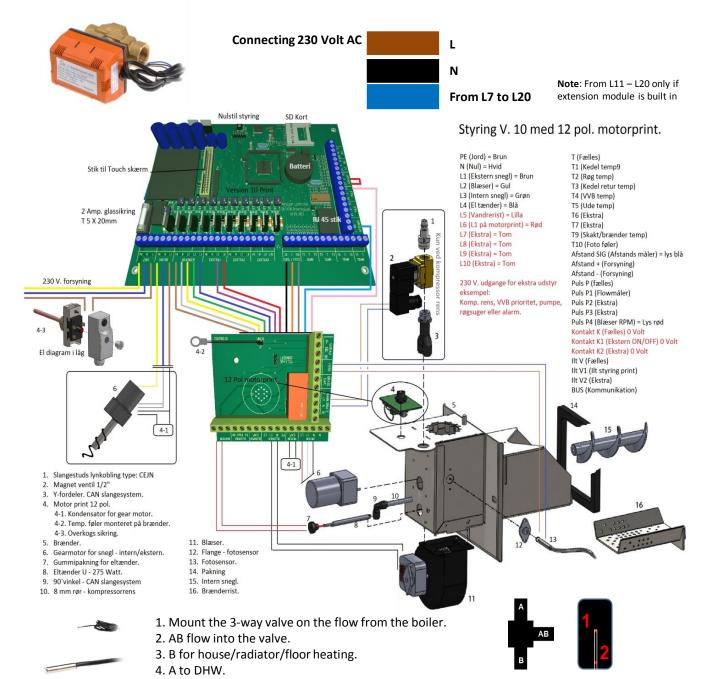



## **Connecting print**



- 5. The temperature sensor is to be mounted in DHW. If it is mounted high (1), it will give less hot water, but fewer start-ups. If it is mounted low (2), it will give more how water, but starts faster while tapping. That gives more start-ups/day.
- 6. Active the output that has been chosen in the controller
- 7. Choose a wanted temperature in DHW in the controller