## OPSÆTNING AF WIRELESS-N MINI ROUTER

Før du kan bruge din Wireless-N Mini Router sammen med dit pillefyr, skal den sættes op. Dette gøres på følgende måde:

 Forbind din router til din PC eller Mac med det medfølgende Ethernet-kabel (RJ45). Kablet sættes i routerens LAN port.



2. Tilslut din router til stikkontakten

WI TFI

- 3. Åben browseren på din PC eller Mac, fx Google Chrome, Internet Explorer, Safari.
- 4. I adressefeltet skriver du routerens IP adresse. Som starndard er den 192.168.10.253
- Du vil blive præsenteret for routerens loginskærmbillede, som ligner billedet nedenfor. Loginoplysningerne er som standard: Username: admin Password: admin



6. I hovedmenuen vælges Wireless ISP.

€ ∋ ₫   0 192 16km 282 Aurora m	Later A Marine Barrier Marine Barrier Marin	0 <b>0 0</b> = 9	
	Anti- team An   Name 2-6 (302 (1)-64-0) (100)   Name 2-6 (302 (1)-64-0) (10-64-0)   Name Annotation   Name Annotation   Annotation Annotation   Annotation Annotation   Annotation Annotation   Annotation Annotation		
	Trible Had P   IP Softward Had P   IP Softward TP3 SIGILIUS 2   Value Aleko P TP3 SIGILIUS 2   Value Aleko P TP3 SIGILIUS 2   IF Softward TP3 SIGILIUS 2   IF Softward TP3 SIGILIUS 2   IF Softward TP3 SIGILIUS 2   Mark Aleko P TP3 SIGILIUS 2		
	Description Contract (State Contract, State Contract,		
WIRELESSN	inne 🚳 🛞		

 Routeren vil nu søge efter tilgængelige trådløse netværk. Efter endt søgning vil du blive præsenteret for en liste med trådløse netværk. Vælg dit eget netværk. Skriv adgangskoden til dit netværk I feltet.

	Wittard Window ISP Point Alexen State	
	No. and a second	
WIREI ESS.N		
	ilonicibiqi Advenzi boput	
	and the second division of the second divisio	

 Tryk på Save&Reboot. Routeren vil nu genstarte. Når routeren er genstartet er den klar til brug med dit pillefyr.

## INSTALLING WIRELESS-N MINI ROUTER

Before you are able to use your Wireless-N Mini Router with your boiler, it needs to be set up. This is how to set it up:

 Connect your router to your PC or Mac with the enclosed ethernet cable (RJ45 cable). Add the cable to the LAN port of the router





14. In the main menu, choose Wireless ISP

	Router JP Reptator III <sup>1</sup> New		Administrat Time Zone Sociosyli - Timosere Lond - Sparade Kongerere	
	Merica Marcan Merica Maran Maran Sep Charan Mandar Hara Mar Jeocrated Classo	AF 2A GDM (B+G+66) VARIAN N VARIAN Shaddad MUSTadda Saada S		
	Lan Shakin Pittain IP Protocol IP Indiana Indiana (Mada Data (Kodaway IP 105 Sense MAC Addeos	Hand IF MELTARCHUCKS 2002/06/2000 2002 10/10/200 District Strate 80 21/2018/5 Teste		
	Man Status Album IP Protocol IP Adams Subret Nada Default dateswig MAC Address	54000g IP Intel 1000P verse 3000 8 3000 9 3000 9 8037500853000		
WIRELESS_N		arma Rega Advances logicant		9
0.000				

- 10. Connect your router to an outlet
- 11. Open the browser on your PC or Mac, fx. Google Chrome, Internet Explorer, Safari etc.
- 12. Add the routers IP address to the address space. This is typically 192.168.10.253
- 13. You will see to the router's login screen, looking like on this picture. The login information is: Username: admin Password: admin



15. The router will now look for available wireless network. After searching, you will see a list of wireless connections. Write the password to your network in the space.



16. Press the Save&Reboot. The router is now going to restart. When the router has restarted, it will be set up with your boiler.