INSTALLING CERAMIC HEATING ELEMENT 300 W.

NBE - POWERED BY NATURE

Part. No.: 400014

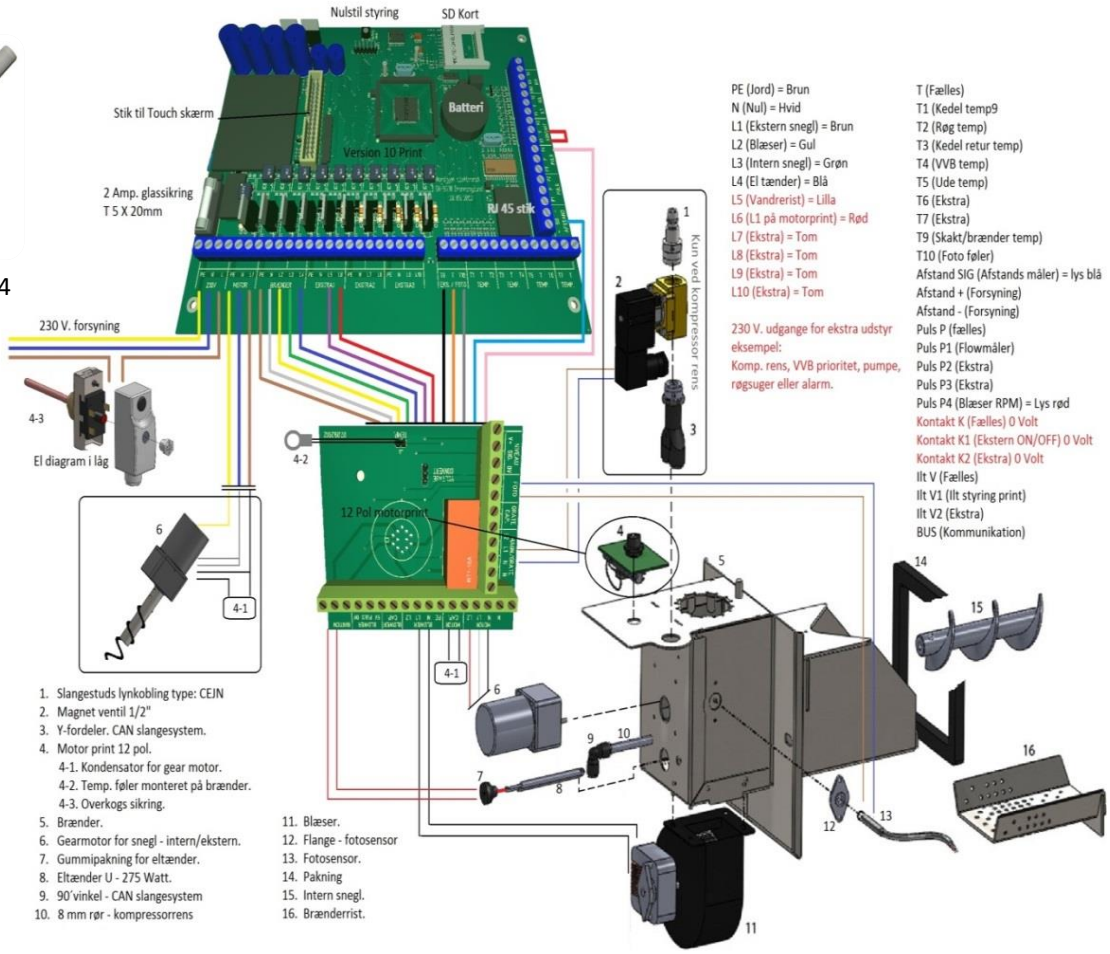

Protection tube for ceramic heating element
Part. No.: 400066

Connection:
Burner Print

Ign.

Ign.

Recommended adjustments:

Settings when the boiler room is heated:

- Preheating **30 sek.**
- Power **50 %**
- Max time **5 min.**
- Blower low **40 %**
- Blower middle **25 %**
- Blower high **60 %**

Setting when the boiler room is unheated:

- Preheating **30 sek.**
- Power **50 %**
- Max time **5 min.**
- Blower low **40 %**
- Blower middle **25 %**
- Blower high **60 %**

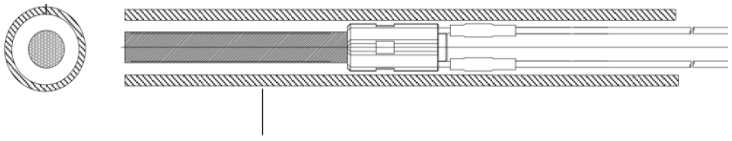

Protection tube

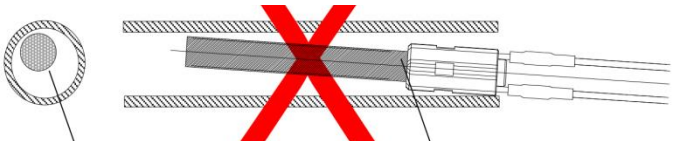

The ceramic heating element must <u>not</u> be in contact with any metal surface

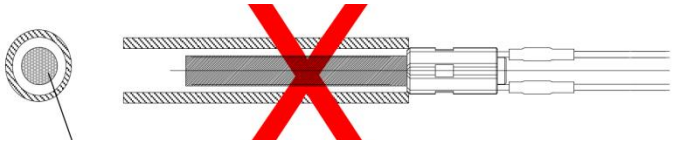

There must be a minimum of 3 mm air around the heating element